

# PARTS LIST

## BL70-HA

### CONTENTS


1. FRAME & BLOWER .....	1
1. FRAME & BLOWER .....	3
2. ENGINE (Cylinder, Crankcase) .....	5
3. ENGINE (Carburetor, Fuel Tank) .....	9
4. ACCESSORIES .....	13
5. OPTIONAL PARTS .....	15

2021. 07.




P/N 525223

BL70-HA  
 1. FRAME & BLOWER

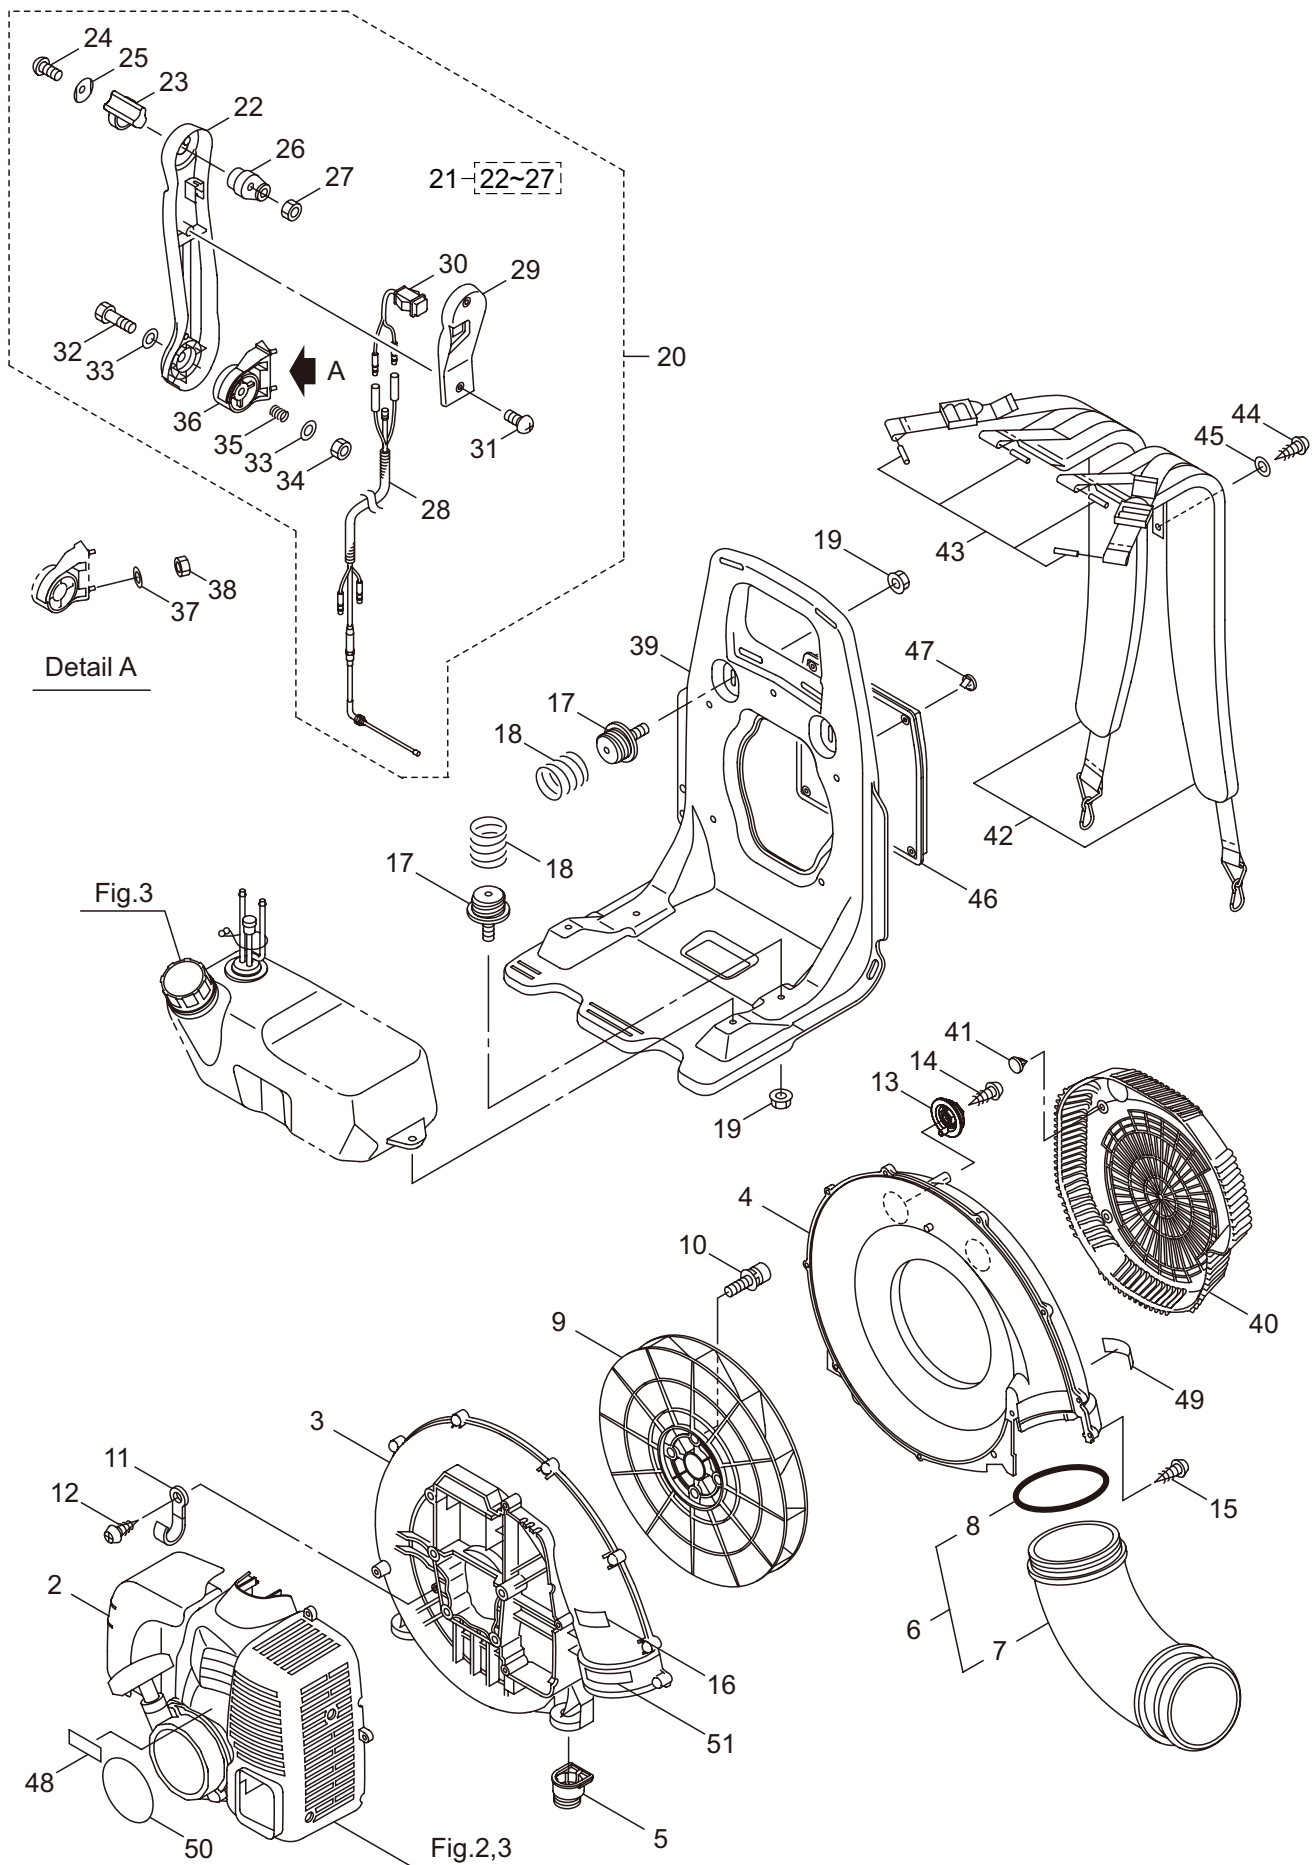


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	395884	BL70-HA	1	CE600/01
1-2	247930	Engine	1	
1-3	662413	Fan Case (E)	1	
1-4	662415	Fan Case (S)	1	
1-5	662416	Plug C	2	
1-6	661894	Elbow Pipe Ass'y	1	Incl.7,8
1-7	661895	Elbow Pipe	1	V95
1-8	275873	O-Ring	1	
1-9	275874	Fan	1	M6X25
1-10	275877	Cap Screw	4	
1-11	109051	Clamp	1	M5x10
1-12	082697	Tapping Screw	1	
1-13	275966	Plug B	2	
1-14	127295	Screw	2	
1-15	130420	Tapping Screw	11	
1-16	285188	Label	1	2.9-50L
1-17	275965	Plug A Comp	4	
1-18	275967	Spring	4	
1-19	127228	Nut	4	
1-20	663679	Throttle Ass'y	1	
1-21	275970	Arm Ass'y	1	Incl.22-27
1-22	277464	Arm	1	5x18
1-23	272721	Lever	1	
1-24	273211	Screw	1	
1-25	272724	Spring Washer	1	
1-26	277466	Link	1	M5
1-27	230662	Nut	1	
1-28	663680	Throttle Wire Ass'y	1	
1-29	663682	Arm Cover	1	
1-30	660684	Stop Switch Ass'y	1	
1-31	235679	Screw	2	M8x45
1-32	089976	Bolt	1	
1-33	550131	Washer	2	
1-34	107581	Nylon Nut	1	
1-35	278237	Spring	1	
1-36	275971	Holder	1	5.3x16xt1.6
1-37	127210	Washer	2	
1-38	560343	Nut	2	
1-39	275898	Flame	1	
1-40	662418	Guard	1	
1-41	100749	Fastener	5	#7
1-42	661897	Knapsack Band	1	M5x16(P-type)
1-43	660404	Rod	4	
1-44	127295	Screw	1	
1-45	127210	Washer	1	

BL70-HA  
 1. FRAME & BLOWER

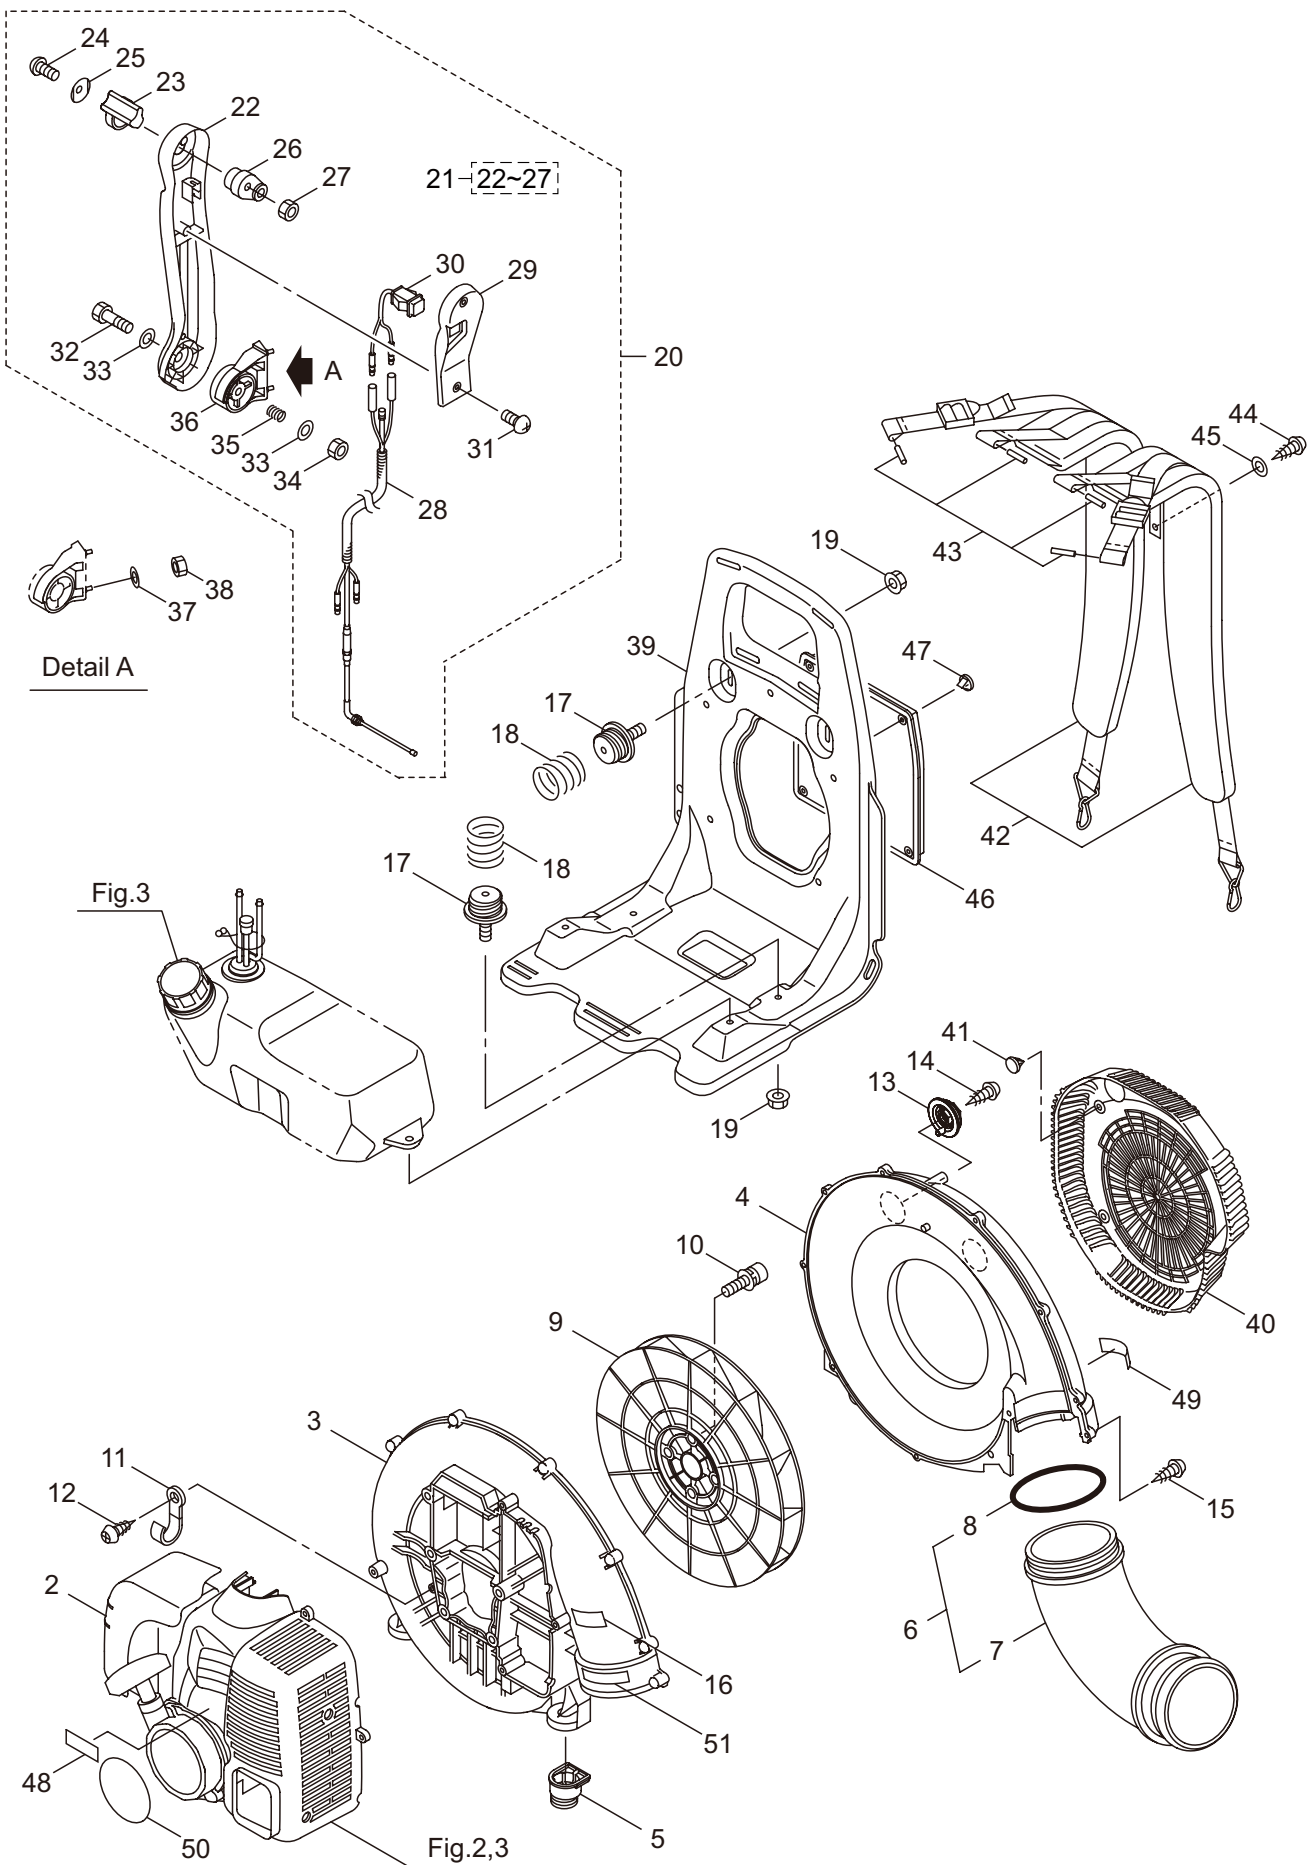


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-46	276460	Cushion Pad	1	
1-47	100749	Fastener	4	#7
1-48	662560	Label	1	BL70-SP
1-49	663101	Label	1	
1-50	663108	Label	1	
1-51	266959	Label	1	Caution

BL70-HA  
 2. ENGINE (Cylinder, Crankcase)

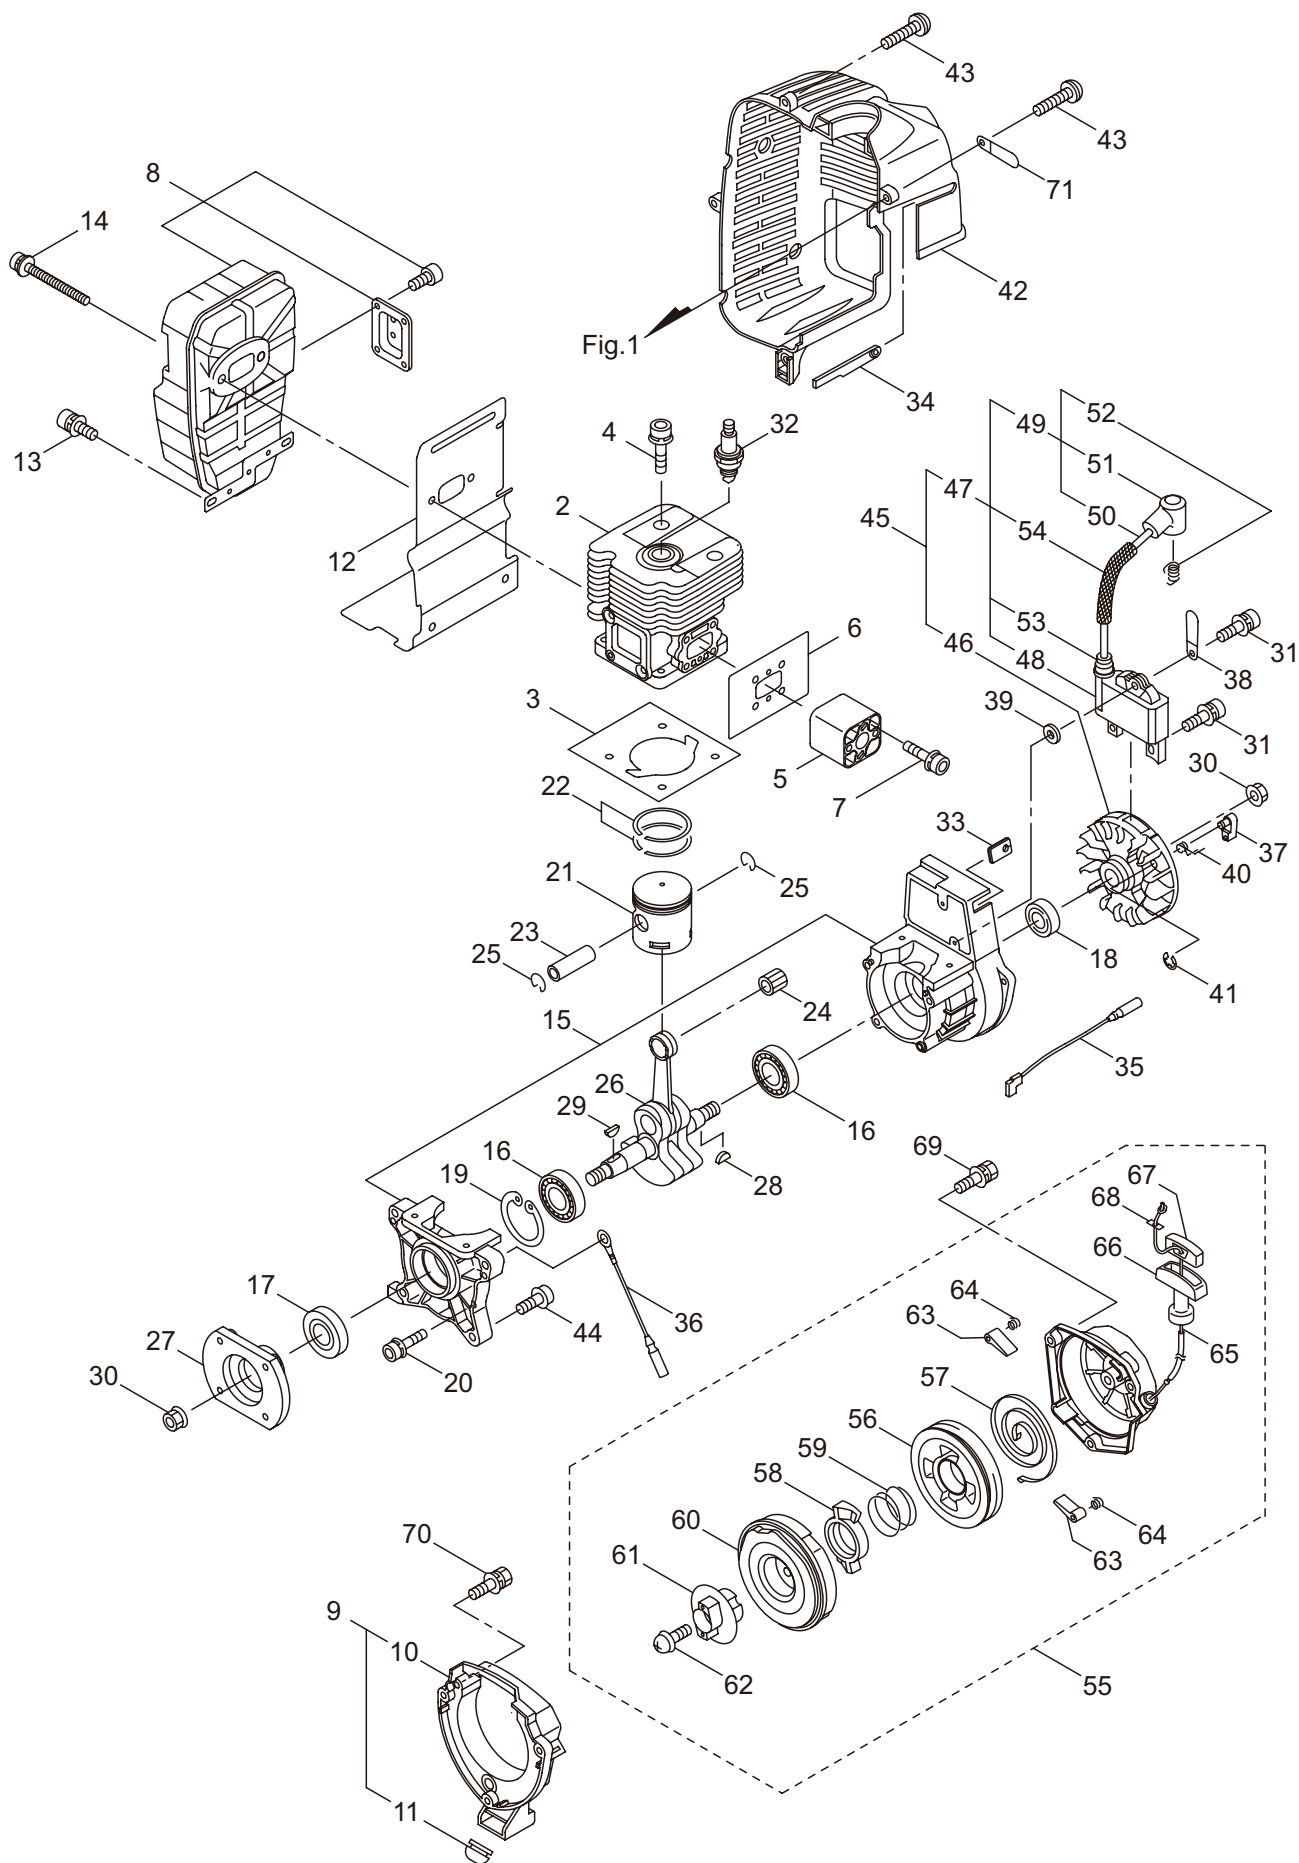

Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	247930	Engine	1	CE600/01
2-2	279708	Cylinder Comp	1	
2-3	279737	Gasket	1	
2-4	261246	Cap Screw	4	M5x25
2-5	276109	Insulator	1	
2-6	276110	Gasket	1	
2-7	277832	Cap Screw	4	M5x30
2-8	247995	Muffler Ass'y	1	
2-9	279413	Adapter Ass'y	1	Incl.10,11
2-10	279026	Adapter	1	
2-11	288192	Grommet	1	
2-12	276111	Gasket	1	
2-13	261607	Cap Screw	2	M5x16
2-14	276154	Cap Screw	2	M6x70
2-15	279696	Crankcase	1	
2-16	276117	Bearing	2	
2-17	276118	Oil Seal	1	
2-18	262565	Oil Seal	1	ISCD15257
2-19	276119	Snap Ring	1	
2-20	234636	Cap Screw	4	M5x35
2-21	278872	Piston	1	
2-22	279736	Piston Ring	2	
2-23	278924	Piston Pin	1	
2-24	278471	Bearing, Needle	1	KBK12x15x14.3x5
2-25	276122	Cir Crip	2	
2-26	278873	Crankshaft/Conn.Rod Ass'y	1	
2-27	663401	Adapter	1	
2-28	261076	Woodruff Key	1	3x10
2-29	261076	Woodruff Key	1	3x10
2-30	276302	Nut	2	
2-31	281211	Cap Screw	2	M4x20
2-32	285982	Spark Plug	1	NGK BPM8Y
2-33	279721	Grommet	1	
2-34	279851	Grommet	1	
2-35	279575	Lead	1	
2-36	279576	Lead	1	
2-37	279069	Ratchet	2	
2-38	279636	Clamp	1	
2-39	289481	Spacer	2	
2-40	262637	Return Spring	2	
2-41	262638	E-Ring	2	
2-42	662559	Top Cover	1	
2-43	131523	Tapping Screw	4	M5x20
2-44	275877	Cap Screw	4	M6X25
2-45	246208	Magneto Ass'y	1	Incl.46-54

BL70-HA  
 2. ENGINE (Cylinder, Crankcase)

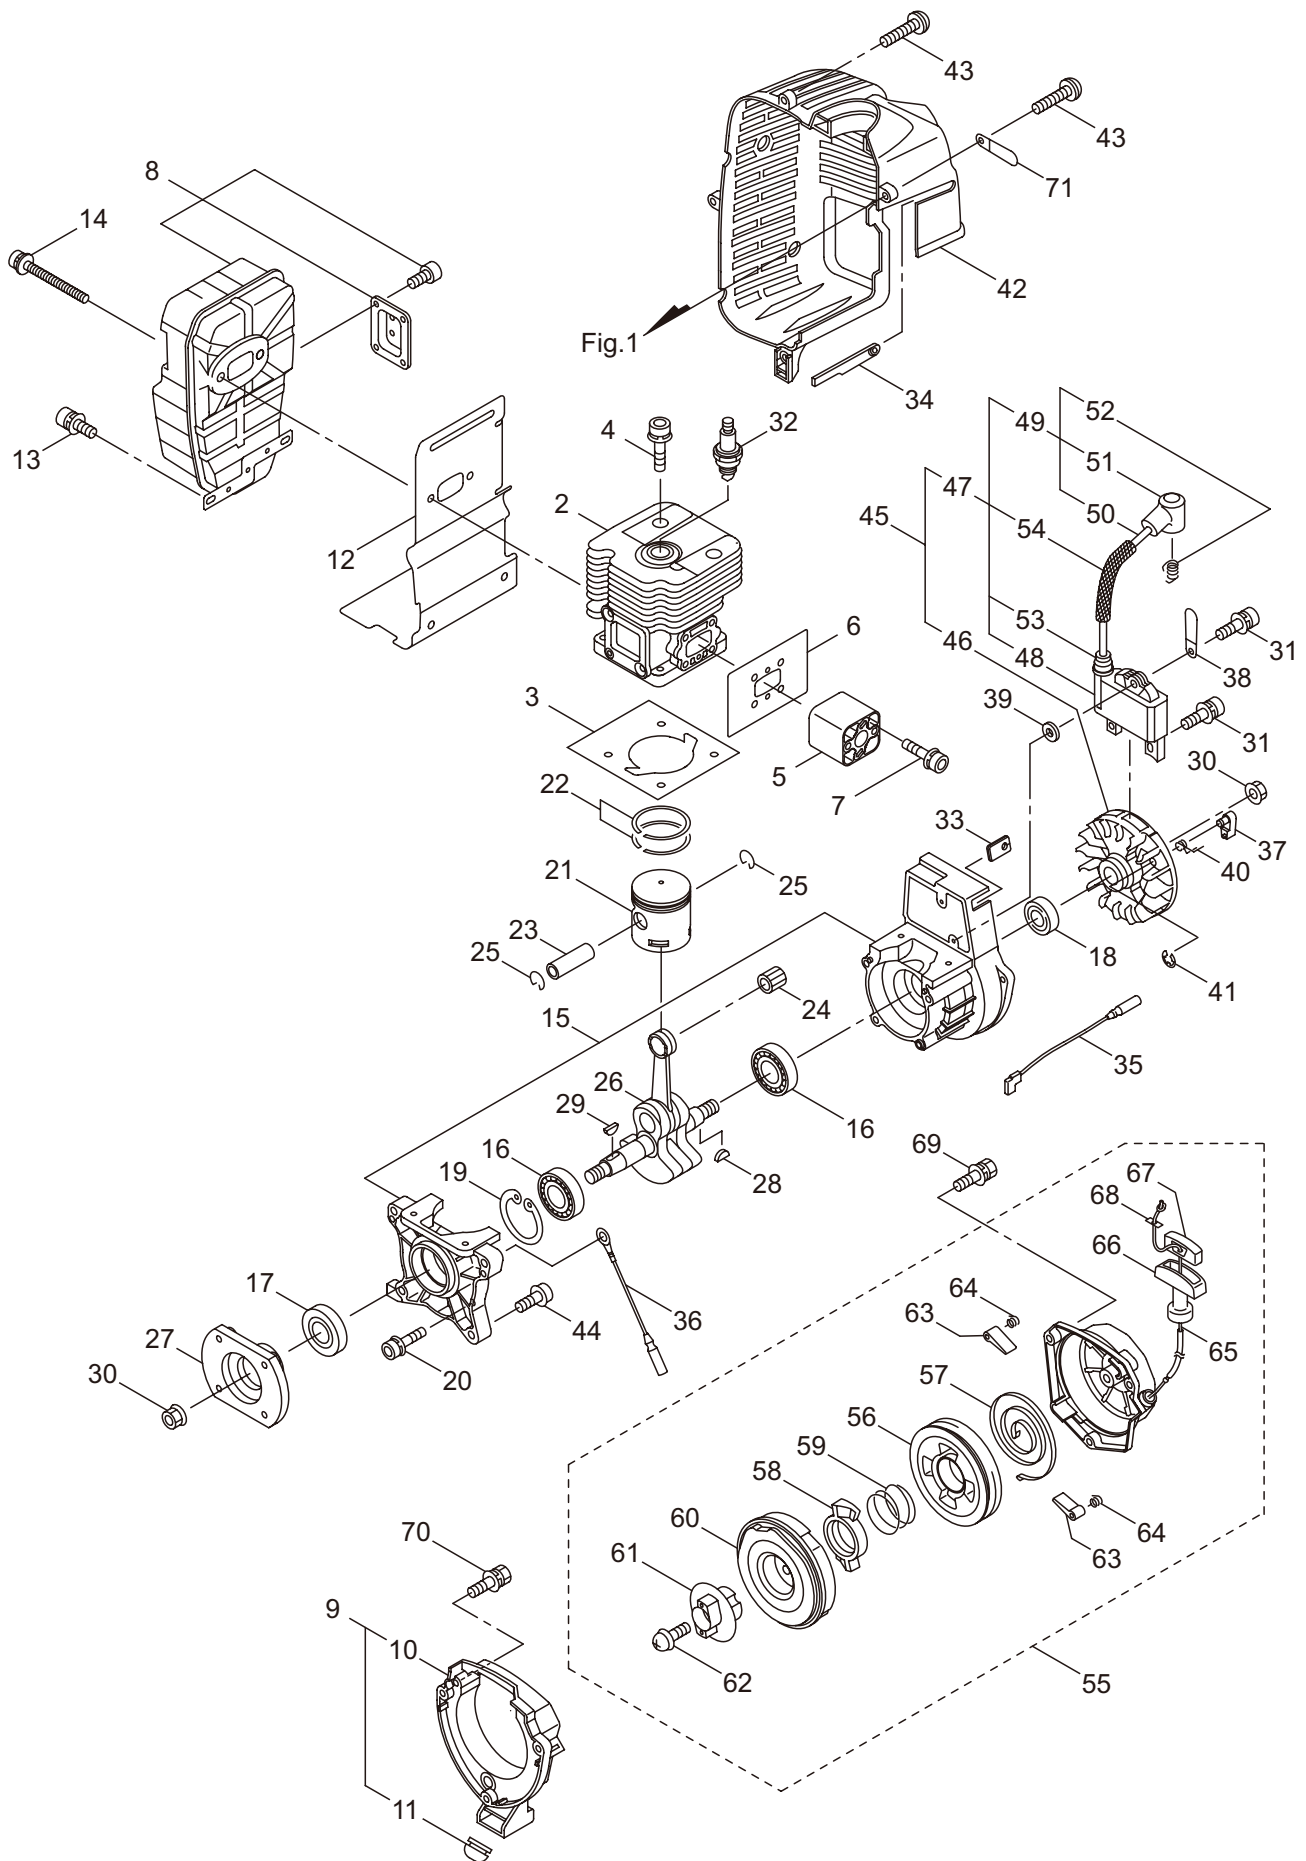




Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-46	246209	Rotor/Fan	1	
2-47	279505	Ignition Coil Ass'y	1	Incl.48-54
2-48	246060	Coil	1	
2-49	246051	Spark Plug Wire Ass'y	1	Incl.50-52
2-50	246052	Spark Plug Wire	1	
2-51	283178	Plug Boot	1	
2-52	272805	Connector	1	
2-53	283271	Cap	1	
2-54	246053	Tube	1	
2-55	279023	Recoil Starter Ass'y	1	Incl.56-68
2-56	280994	Pulley	1	
2-57	280995	Spiral Spring	1	
2-58	280996	Pawl	1	
2-59	280997	Return Spring	1	
2-60	279366	Spring Comp	1	
2-61	280999	Plate	1	
2-62	281000	Set Screw	1	
2-63	281001	Pawl	2	
2-64	281002	Return Spring	2	
2-65	279862	Starter Rope	1	
2-66	262633	Starter Grip	1	
2-67	262981	Cap	1	
2-68	281005	Rope Stopper	1	
2-69	284985	Screw	3	M5x25
2-70	248474	Screw	3	M5x18
2-71	279636	Clamp	1	

BL70-HA


3. ENGINE (Carburetor, Fuel Tank)

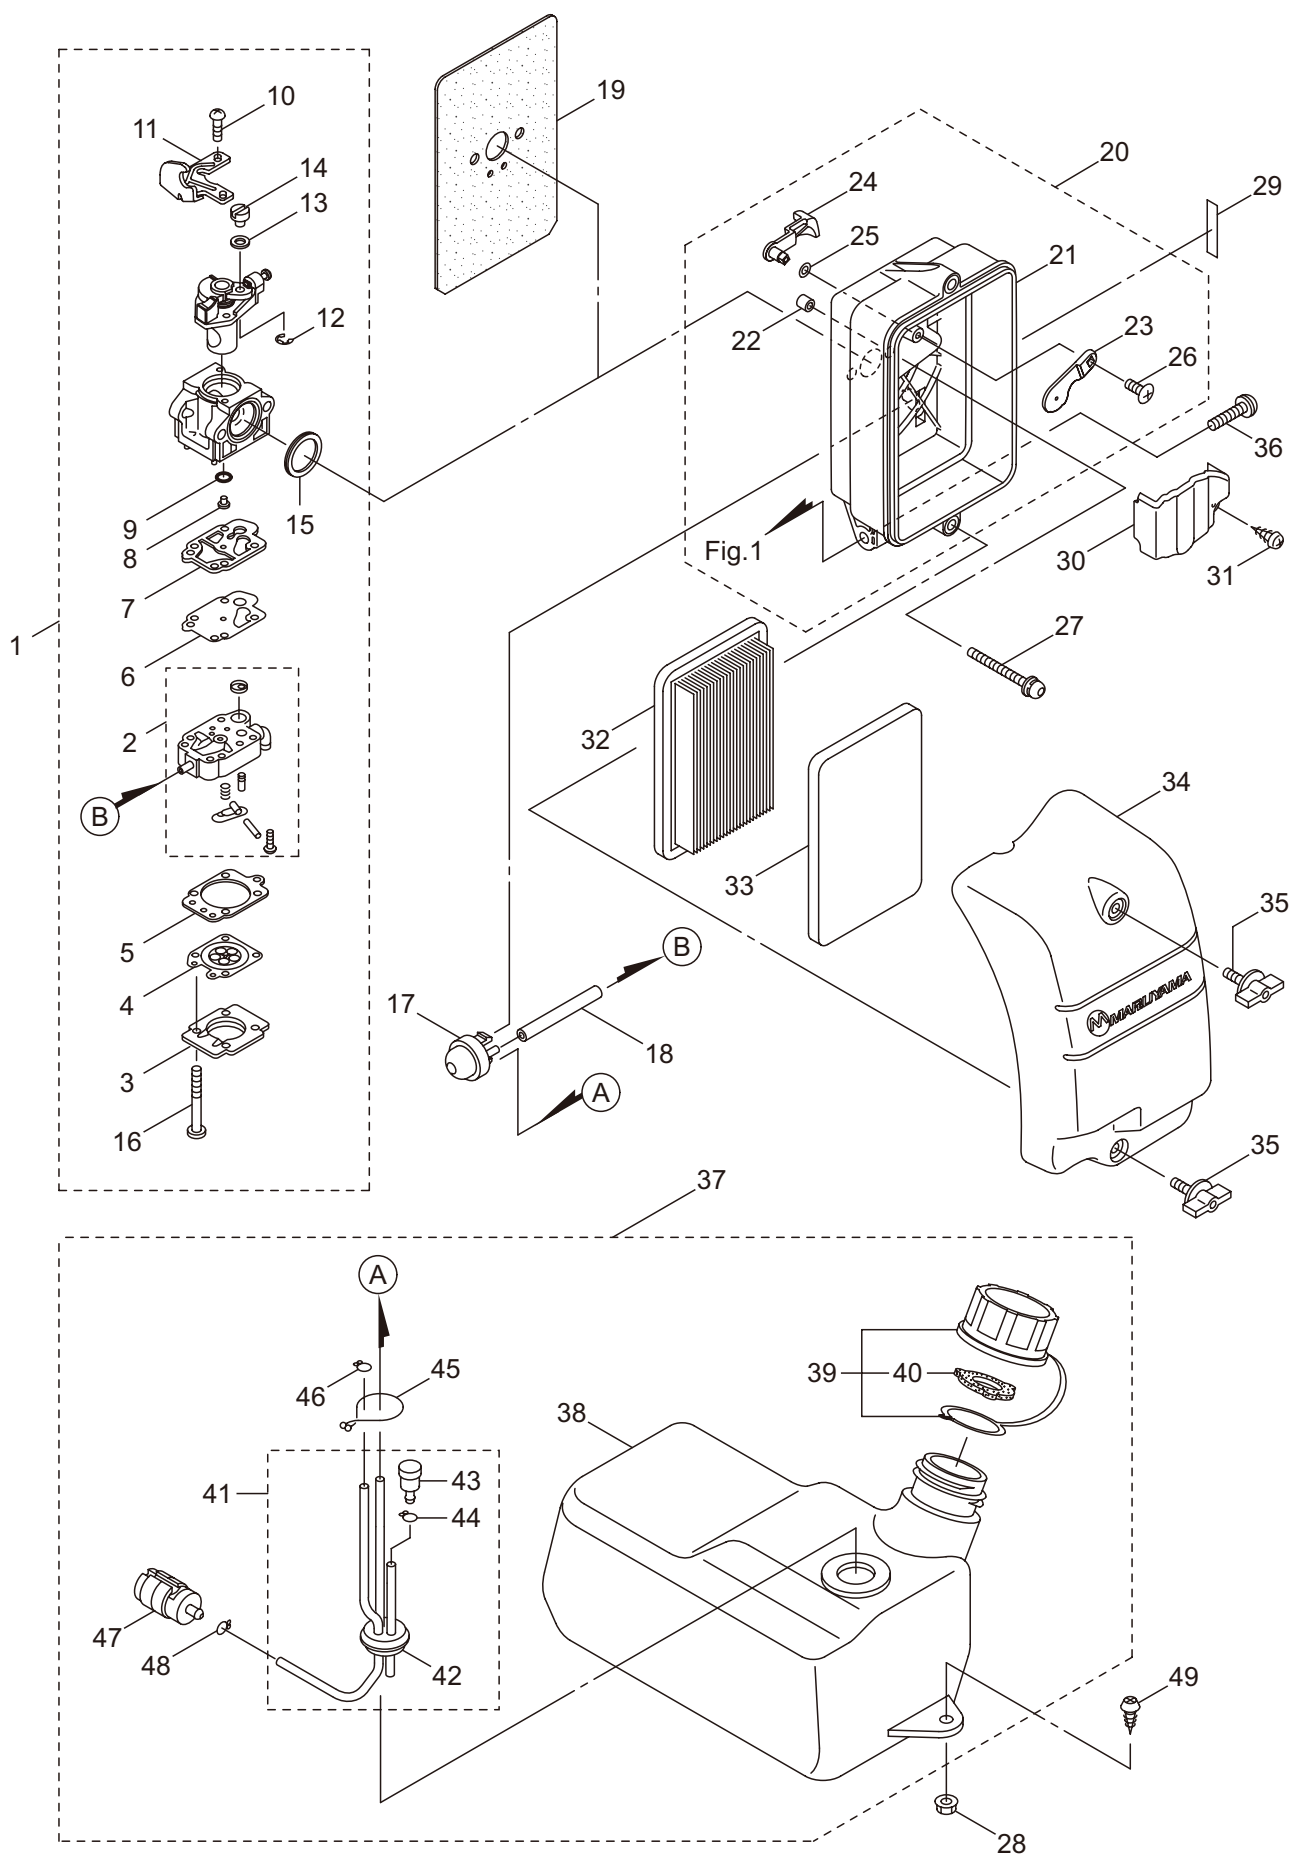

Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	248002	Carburetor Ass'y	1	Incl.2-16
3-2	283124	Pump Body	1	
3-3	263726	Cover Plate	1	
3-4	283905	Diaphragm, Meterring	1	
3-5	263727	Gasket	1	
3-6	262994	Diaphragm,Fuel Pump	1	
3-7	282576	Gasket	1	
3-8	248368	Jet	1	
3-9	261871	O-Ring	1	
3-10	261875	Screw	2	
3-11	248327	Bracket	1	
3-12	261876	E-Ring	1	
3-13	264678	Washer	1	
3-14	261658	Swivel	1	
3-15	261657	Packing	1	
3-16	263737	Screw	4	Incl.21-26
3-17	282299	Pump	1	
3-18	279029	Pipe	1	
3-19	276134	Gasket	1	
3-20	248004	Air Filter Case Ass'y	1	
3-21	248005	Air Filter Case	1	6.4x11x0.15
3-22	248006	Sleeve	2	
3-23	248007	Valve	1	
3-24	248008	Lever	1	
3-25	284816	Washer	1	
3-26	269032	Screw	1	M5x55 M6
3-27	274106	Cap Screw	2	
3-28	125277	Nut	2	
3-29	277762	Label	1	
3-30	248009	Plate	1	
3-31	248393	Screw	1	3.5x14
3-32	248010	Element	1	
3-33	248011	Air Cleaner	1	
3-34	248013	Cleaner Cover	1	
3-35	279350	Knob	2	
3-36	131523	Tapping Screw	1	M5x20 Incl.38-48
3-37	663628	Fuel Tank Ass'y	1	
3-38	275903	Fuel Tank	1	
3-39	131319	Tank Cap Ass'y	1	
3-40	287058	Gasket	1	
3-41	663792	Fuel Pipe Ass'y	1	Incl.42-44
3-42	268065	Grommet	1	
3-43	261590	Breather	1	
3-44	261117	Clip	1	
3-45	131328	Clamp	1	


BL70-HA

3. ENGINE (Carburetor, Fuel Tank)

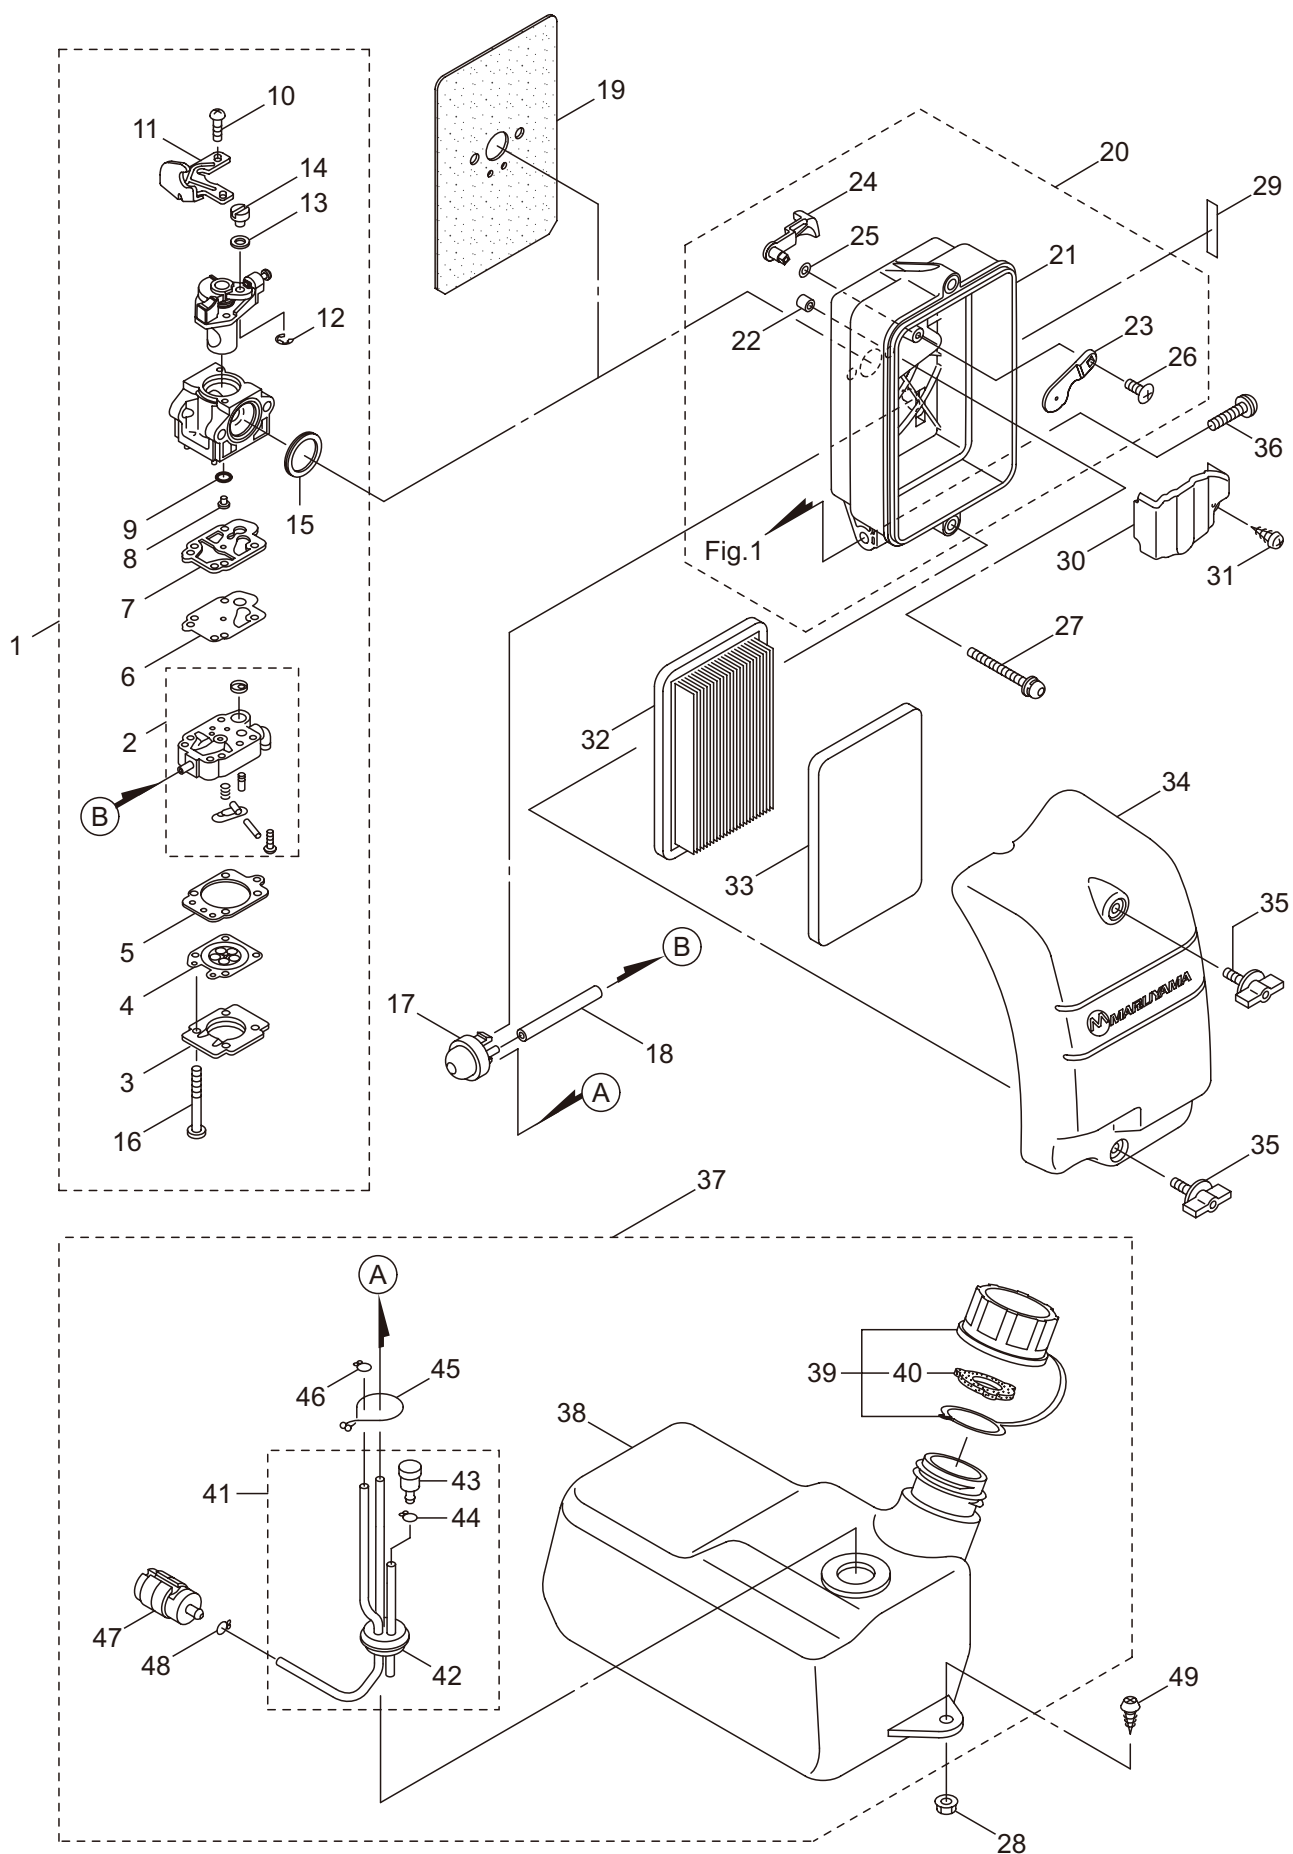



Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	261117	Clip	1	
3-47	247107	Filter Ass'y	1	
3-48	261117	Clip	1	
3-49	127221	Screw	2	M6x16

BL70-HA  
4. ACCESSORIES

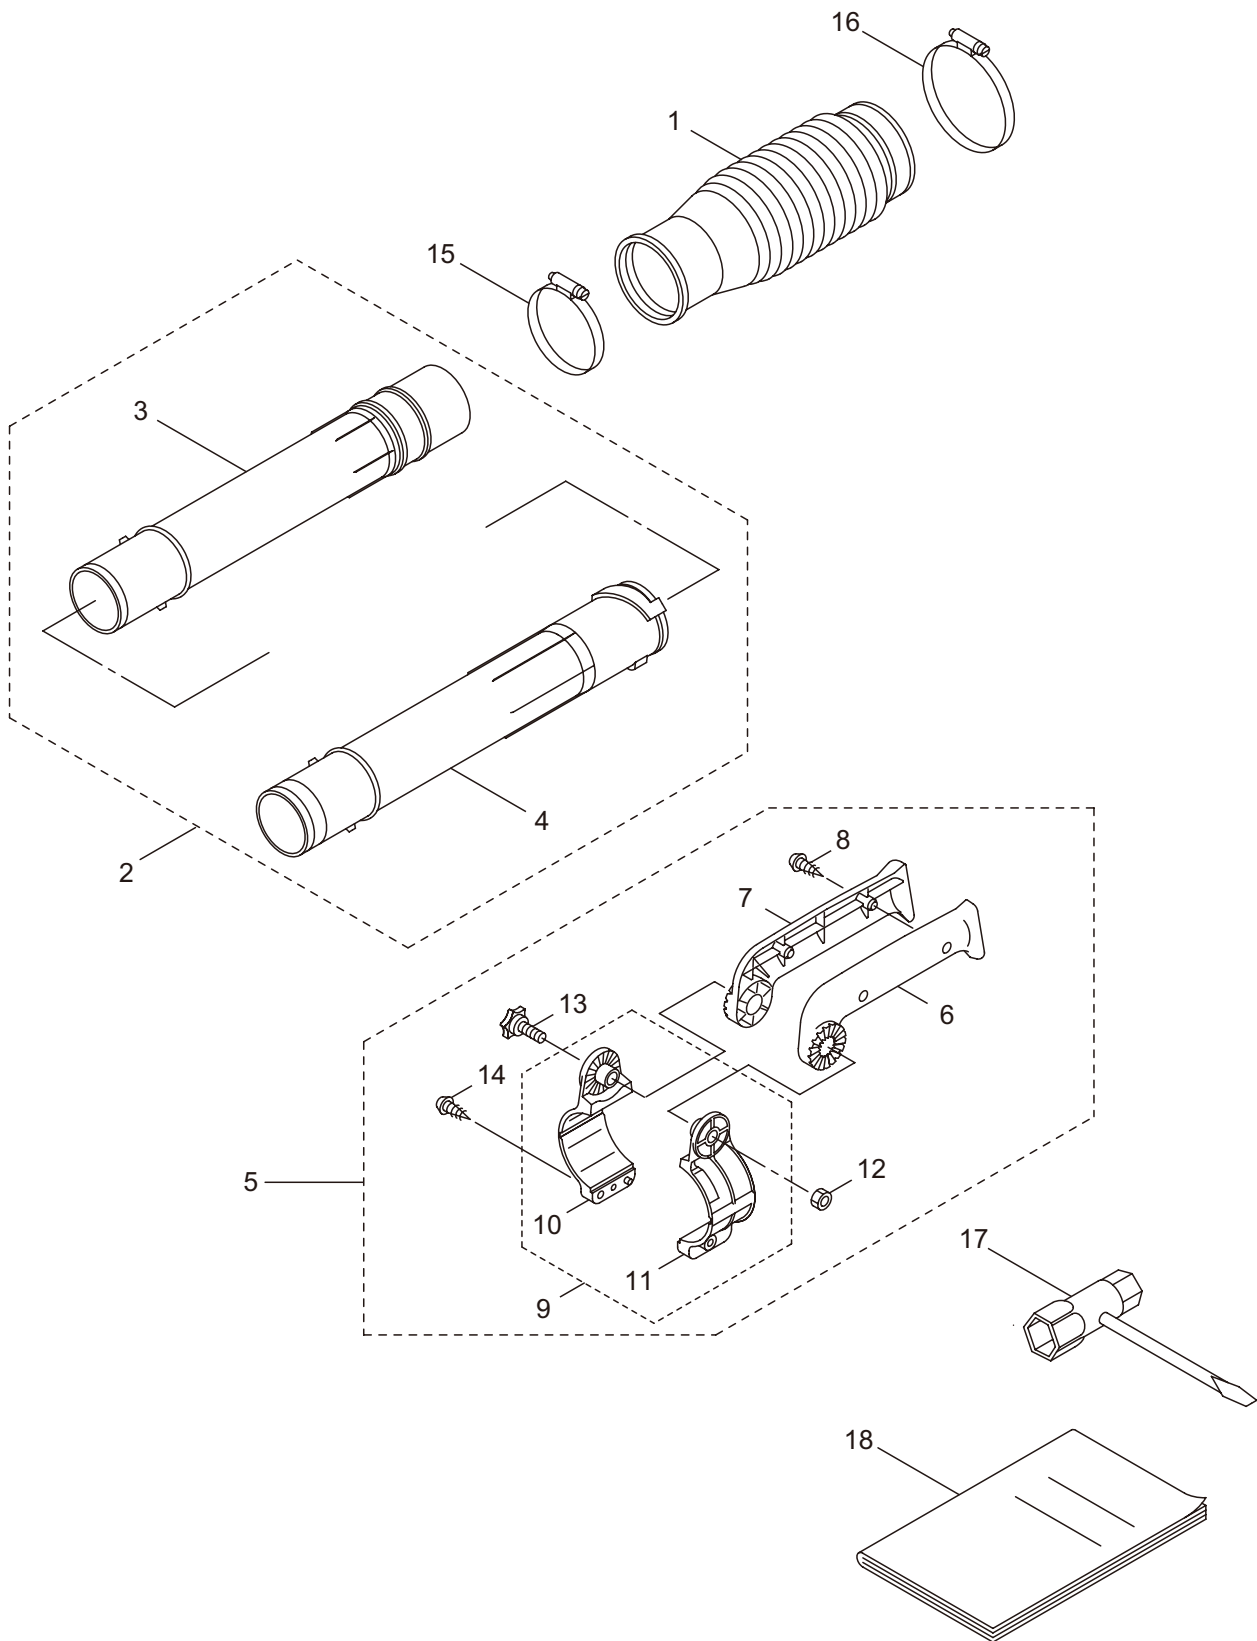

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	662555	Flexible Pipe	1	
4-2	127724	Pipe Ass'y	1	Incl.3,4
4-3	122395	Swivel Pipe	1	
4-4	122400	Straight Pipe	1	510L
4-5	663113	Grip Ass'y	1	Incl.6-14
4-6	275974	Grip (A)	1	
4-7	275976	Grip (B)	1	
4-8	235679	Screw	2	
4-9	662407	Band Ass'y	1	Incl.10,11
4-10	662408	Band (A)	1	
4-11	662410	Band (B)	1	
4-12	127298	Nut	1	M6
4-13	276459	Knob Bolt	1	M6x40
4-14	130420	Tapping Screw	1	M5x25
4-15	130207	Clamp Ass'y	1	#85
4-16	130208	Clamp Ass'y	1	#105
4-17	662598	Box Spanner	1	
4-18	662552	Instruction Manual	1	BL70

BL70-HA  
5. OPTIONAL PARTS

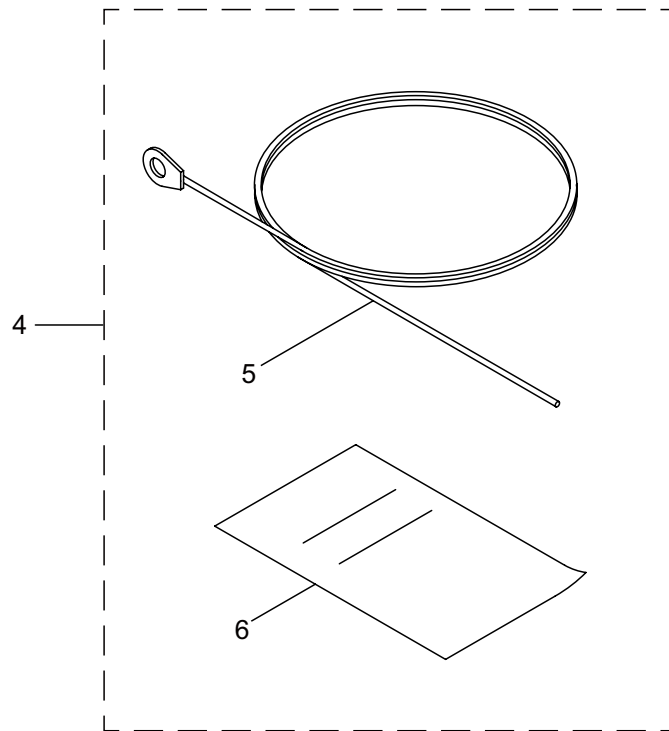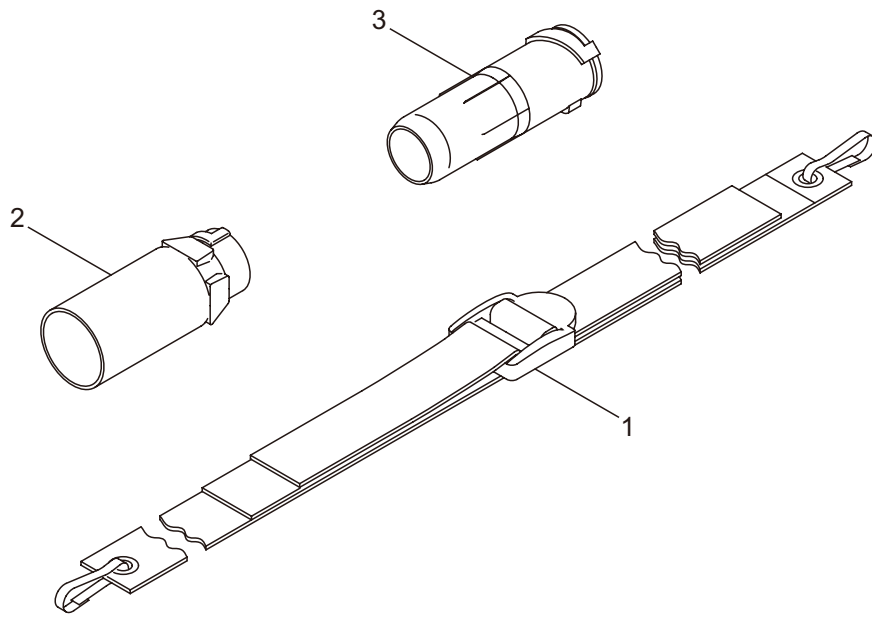



Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	125439	Hip Belt Ass'y	1	
5-2	131870	Tornado Tip, Blower Nozzle	1	
5-3	125146	Cone Pipe	1	
5-4	664018	Earth Kit	1	Incl.5,6
5-5	663923	Earth Code	1	1.0x2200L
5-6	663924	Instruction Manual	1	